

eQart®

BY

 FLEXQUBE®

eQart software release 2.1.0

What's new in version 2.1.0

- Introducing a Towing mode, When using the eQart for towing operations simply activate this feature in the settings menu and the eQart will beep and move slowly when starting a navigation assignment
- Edit mode introduced in mission planner, Giving the user the ability to go in and edit missions and resave them
- Added a new function block in mission planner called battery percentage, allowing the mission to perform specific tasks in the battery is low
- New mapping wizard
- Firmware support for generation 2.0 brains

What's fixed?

- Fixed several UI bugs in the mission planner, some bugs would cause the application to crash but these have now been resolved
- Improving the mission planner creation screen by detecting inconsistencies in the mission and notifying the user
- Fixed a bug that would exit the currently running mission if the safety was triggered
- Image processing error would popup for the user even if the cameras was fine, this has now been addressed
- Edited the LED:S in mapping mode so that when the eQart enters a junction the LED:S will blink in a different color thus notifying the user that the eQart has detected the junction correctly
- The "select timeout" bug has been addressed